



Installation Instructions For Models: 23345 & 23365

MIRROR
IMAGE™
BY APTATIONS

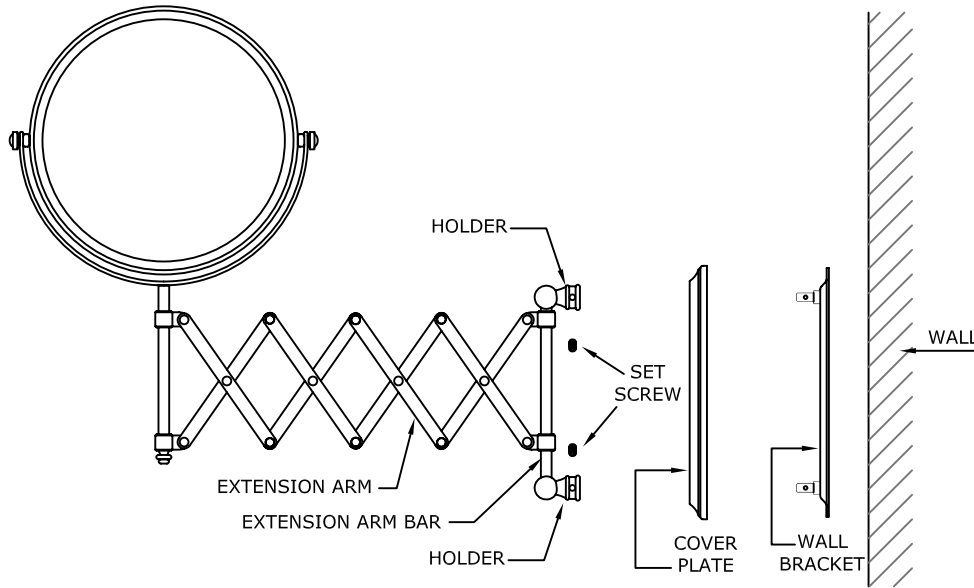

1. Remove the Cover Plate and Wall Bracket using an allen wrench by unscrewing the set screws from the Extension Arm Bar holders.
2. Carefully separate the Extension Arm, Cover Plate and Wall Bracket.
3. Choose an installation height that best serves your purposes. Determine if the wall where you are planning to mount your mirror requires a wood screw or another type of fastener.

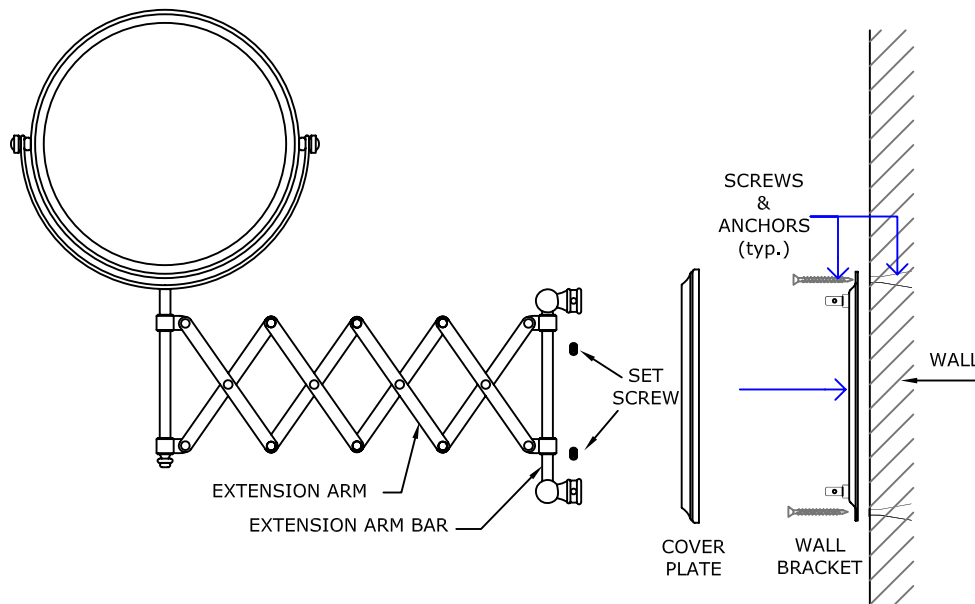

4. Install the Wall Bracket by installing screws or other fasteners into the wall until the plate is level and secure. **NOTE:** the set screw recesses should be on the right hand side, as you face the wall.
5. For best stability, use all of the (four) screws provided.

PLEASE TURN OVER FOR NEXT STEPS.



CHANGING THE WAY YOU SEE YOURSELF

TM


© APTATIONS, INC
Copyright 2010




TM

Installation Instructions
For Models: 23345 & 23365

MIRROR
IMAGE™
BY APTATIONS

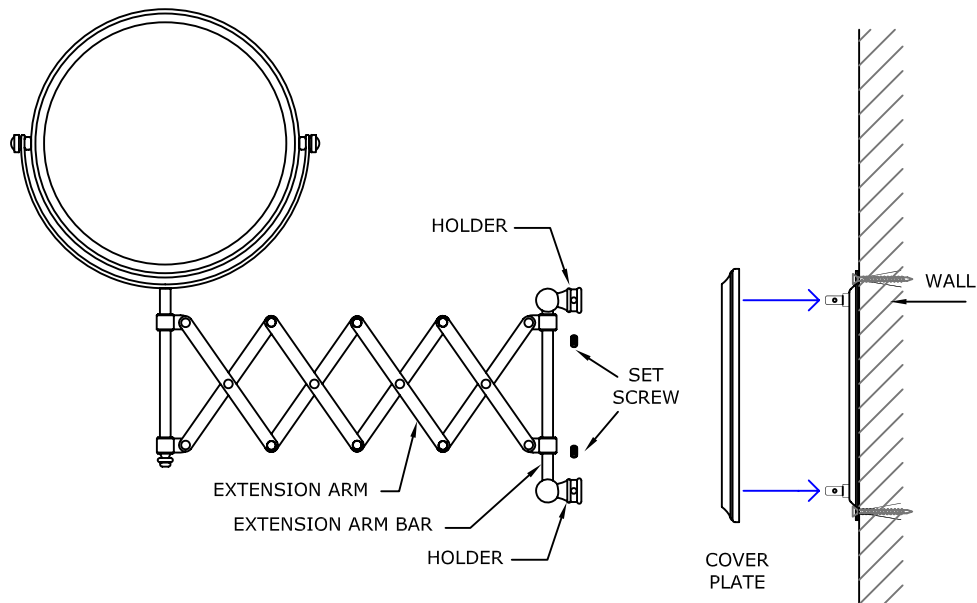

6. **Align the holes of the Cover Plate over the round bars on the Wall Bracket and carefully press the Cover plate over the Wall Bracket so that the Cover Plate is against the wall.**

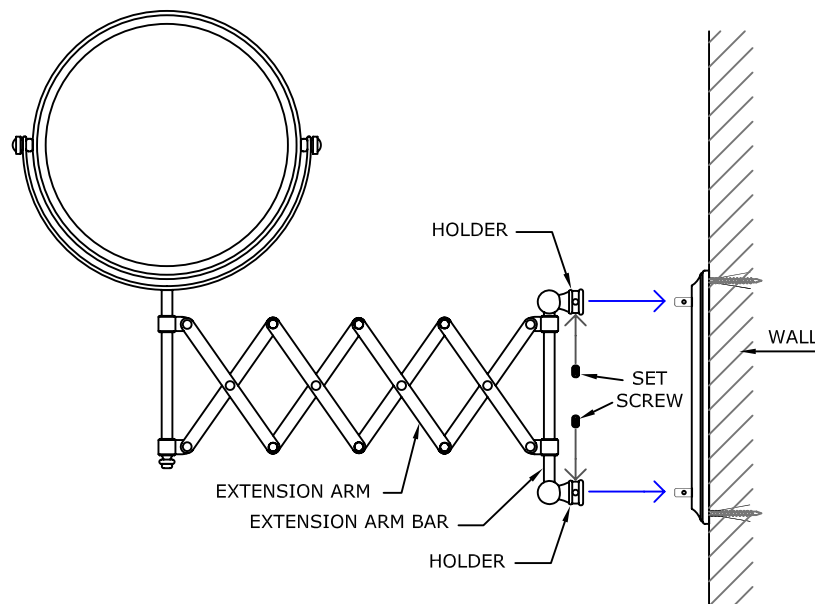

7. **Place the Extension Arm bar holders on the round bars of the Wall Bracket. The set screw recesses in the bars should align with the holes in the holders on the Extension Arm bar.**
8. **Using an allen wrench, screw the set screws tightly into the holders on the Extension Arm bar.**

WHEN YOUR MIRROR IS INSTALLED, TO PREVENT DAMAGE DO NOT HANG ITEMS ON THE MIRROR OR ARM. SAVE THESE INSTRUCTIONS.



CHANGING THE WAY YOU SEE YOURSELF

© APTATIONS, INC
Copyright 2010

