

C63007

INSTALLATION INSTRUCTIONS SHEET

START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.


Technical Support: 1-844-628-8368

Please Note:

- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX

CE LUMINAIRE NE DOIT PAS ETRE MONTE SUR UNE BOITE DE SORTIE NI SUPPORTE PAR UNE TELLE BOITE

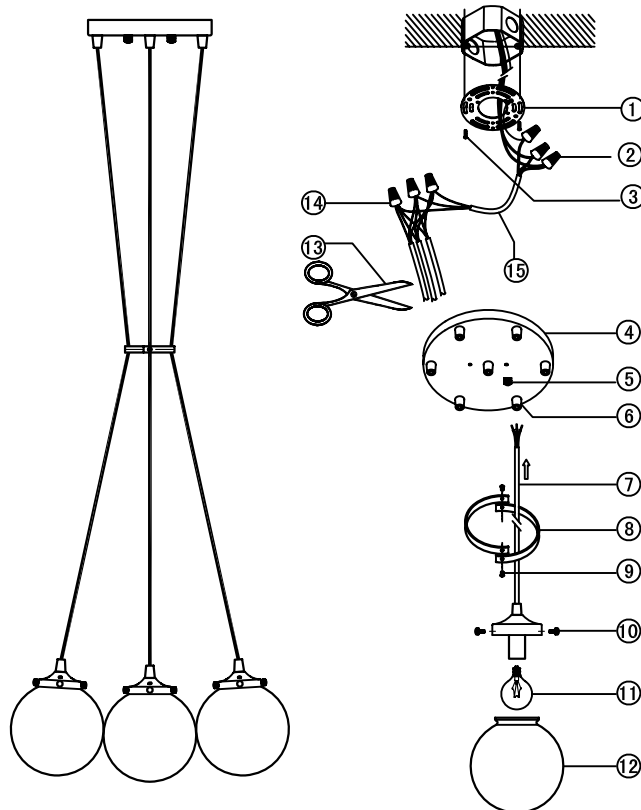

- 1 Ensure main supply is switched off.
- 2 Fit the mounting bracket(1) onto junction box with machine screw(3).
- 3 Unscrew the side thread on metal part(6) and make wire(7) across the part and canopy, meanwhile adjust wire length and lock it.(If internal wire is shorter, and not much space for more wire in the canopy, Please cut down extra wires with scissor(13). **WARNING: THIS STEP MUST BE OPERATED BY ELECTRICIAN.**)
- 4 Connect wires with wiring cap(14) per positive and negative terminals in group(2 or 3 internal wires and a lead wire(15) named a group), and then connect wires(2) according to color (White to White, Black to Black). Connect all earth plug together onto the crossbar with green screw to tight.
- 5 Fit the canopy(4) onto mounting bracket with finials(5).
- 6 Install the lamp(11) firmly onto lampholder.
- 7 Fix glass shade(12) onto metal cover with screw(10).
- 8 Bind all wires with semicircle ring(8) and fix 2pcs of half round with screw(9). Please note the ring could be adjusted up and down.
- 9 Reconnect power.