W74203, W74204
INSTALLATION INSTRUCTIONS SHEET

START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.
 **Technical Support:** 1-844-628-8368

Please Note:
- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.

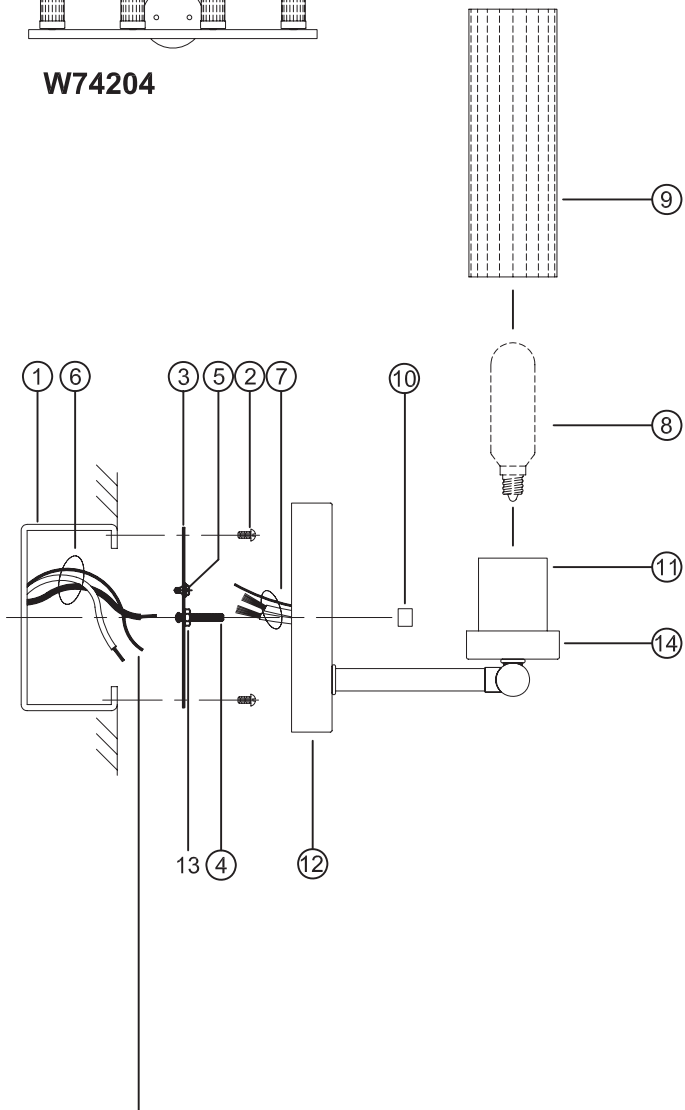THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX

CE LUMINAIRE NE DOIT PAS ETRE MONTE SUR UNE BOITE DE SORTIE NI SUPPORTE PAR UNE TELLE BOITE

W74203

W74204

1 Ensure main supply is switch off.

2 Screw the green screw ⑤ and mounting screw ④ on the round mounting strap ③ , have the mounting screw ② through mounting strap ③, and screw into J-box ① (not provided).

3 Connect the wires ⑥ ⑦ using wire nuts, have the ⑫ backplate through mounting screw ④ ,and install the backplate ⑫ using nut ⑩ .

4 Install the lamp ⑧ (not provided) on the socket ⑪ and install glass shade ⑨ on the socket cup ⑭.

WHITE SUPPLY WIRE — WHITE OR IDENTIFIED FIXTURE WIRE — UL LISTED WIRE NUTS

BLACK SUPPLY WIRE — PLAIN OR BLACK FIXTURE WIRE

BARE, OR GREEN GROUND WIRE FROM SUPPLY — BARE, OR GREEN FIXTURE GROUND WIRE

OR

BARE, OR GREEN GROUND WIRE FROM SUPPLY — GREEN GROUND SCREW

MATTEO